

Wireless Keypad Instruction Sheet

Package contents

1. wireless keypad
2. USB receiver / dongle
3. 2 x AAA batteries
4. wireless keypad instruction sheet

System requirement

1. IBM-compatible PC
2. Microsoft Windows 98SE/ME/2000/XP
3. USB compatible

Setup the connection

Please plug in the mini USB receiver / dongle into any available USB port.

Insert two 2 AA batteries into battery tray of the keypad, and make sure the batteries were inserted correctly.

After the system has finished loading, simply press the connect button (LED) on the USB receiver/dongle, then press on the red connect button on the keypad to setup the wireless connection.

If the LED on the receiver stops flashing, and only flashes when keys are pressed, the keypad is well connected with the receiver.

State Lock use instruction

1. When "State Lock" of keypad is turned on, (when State Lock LED is turned on):

Either when system's Num Lock is turned on or turned off, the user may only enter '/', '*','-', '+', 'Enter', 'Back', ':', '0', '000', '1', '2', '3', '4', '5', '6', '7', '8', '9'.

2. When "State Lock" of keypad is turned off, (when State Lock LED is turned off):

If the system's Num Lock is turned on, the user may enter '/', '*','-', '+', 'Enter', 'Back', ':', '1', '2', '3', '4', '5', '6', '7', '8', '9', '0', '000'.

If the system's Num Lock is turned off, the user may enter '/', '*','-', '+', 'Enter', 'Back', 'End', ' ', 'PgDn', ' ', ' ', 'Home', ' ', 'PgUp'.

3. State Lock: Switching the input state.