


Multimedia Keyboard


User Manual



 
How To Redefine The Hot keys

First, you will need to install the "Media & Office Keyboard" software, see section Step. Install Software above.


Once installed, you will see a Keyboard icon  at the bottom right of your screen. This icon will appear every time you start the computer.

The Hot Keys are already set up once you have installed the driver. If you want to re-define the Hot Keys, you have to click on the Keyboard icon  at the bottom right of your screen.

A Keyboard Properties window will open. Select the "Function" tab from the top of the window. You will see the following screen :

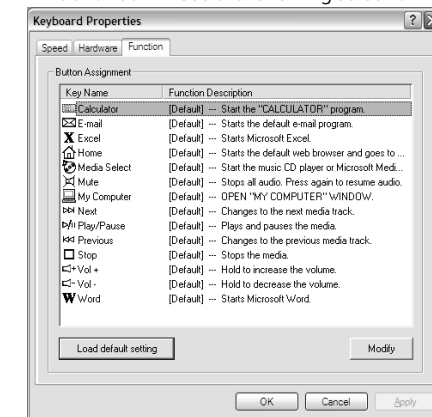

 Now select the Hotkey you want to redefine, and click "**Modify**". The following screen will appear.

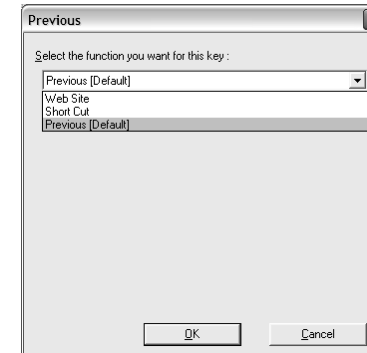

Besides the default function, you can redefine the Hotkey to a Web Site or a Short Cut.

- **Web Site :**
Please select Web Site and enter the required web address and click "**OK**". Now click "**Apply**" to save the new Hotkey setting.
- **Short Cut :**
To assign a program, command or function, please select the Short Cut option. Enter the Name and Path you wish to assign or alternatively select Browse to search for Name and Path. Click "**OK**" to confirm details and "**Apply**" to save the Hotkey.



NOTE

- Not all the hot keys on the keyboard can be redefined. Only the ones (hot keys) that appear in the window may be redefined. Please verify the icon on the keyboard and the icon on the window.



Multimedia Keyboard

User Manual

 
System Requirement

1. IBM-Compatible PC
2. Microsoft Windows 98SE/ME/2000/XP
3. Available USB or PS/2 port

Connect the Keyboard to Your Computer


USB Connection

- Please Plug the rectangular USB connector into your computer's rectangular USB port.

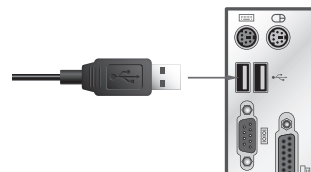

PS/2 Connection

 1. Turn off the Computer power.
2. Attach the purple USB-to-PS/2 adapter to the USB connector, and then plug it into the computer's purple PS/2 keyboard port.

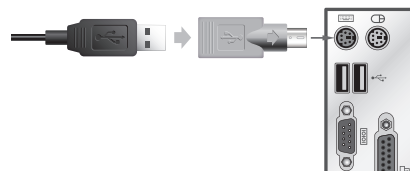

Install Software

 


- If you have previously installed other keyboard or mouse drivers on your Computer, please uninstall them first.
- Please make sure that the keyboard is properly connected to the computer.


1. Please insert the driver CD into your CD-ROM.
2. Explore your CD-ROM drive, and double click with your mouse button on "**Setup.exe**" file to run the keyboard driver installation.
3. Select your installation interfaces: **PS2** or **USB**.




4. Click on "**OK**".

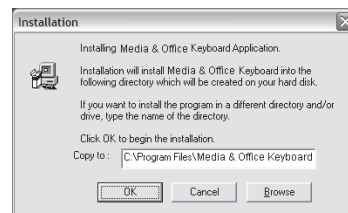

 5. When installation finishes, please reboot your system.

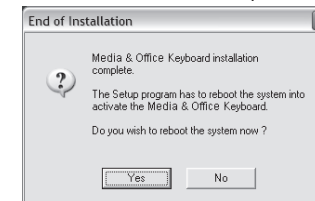







6. After the system has been rebooted, a  icon will appear on the bottom right corner of your screen. The icon indicates that the driver software has been installed successfully.



- If you wish to remove the driver, please go to the following directory: **START/PROGRAM FILE/Media & Office Keyboard/**, and select "**Uninstall**" to remove the software.

Hot Key Functions

-  **BACK** : Go back to the previous web page.
-  **FORWARD** : Go to the next web page.
-  **STOP** : Stop default web browser from loading or refreshing a web page.
-  **REFRESH** : Update the content of the current web page on a default web browser.
-  **SEARCH** : Open the "Find" window in the START taskbar.
-  **FAVORITES** : Open the "Favorites" group.



WEB/HOME : Start your default browser and go immediately to your Home Web page.(#1)



MAIL : Start the default E-mail program.(#1)



PLAY/PAUSE : Play or pause the default media player.(#1)



STOP : Stops the media.(#1)



PREVIOUS TRACK : Change to the previous track of the default media player.(#1)



NEXT TRACK : Change to the next track of the default media player.(#1)



MEDIA : Start the music CD player or Microsoft Windows Media Player application.(#1)



VOLUME DOWN : Press and release, or press and hold to decrease the volume.(#1)



VOLUME UP : Press and release, or press and hold to increase the volume.(#1)



MUTE : Stops all audio. Press again to resume audio.



CALCULATOR : Start the "CALCULATOR" program. (#1)



MY COMPUTER : Open the "My Computer" window.(#1)



#1 : Most hot keys may be re-configured to start other applications or Web pages. Please refer to page 5 "How To Redefine The Hot Keys" for more detail.